


20.50.1315.00

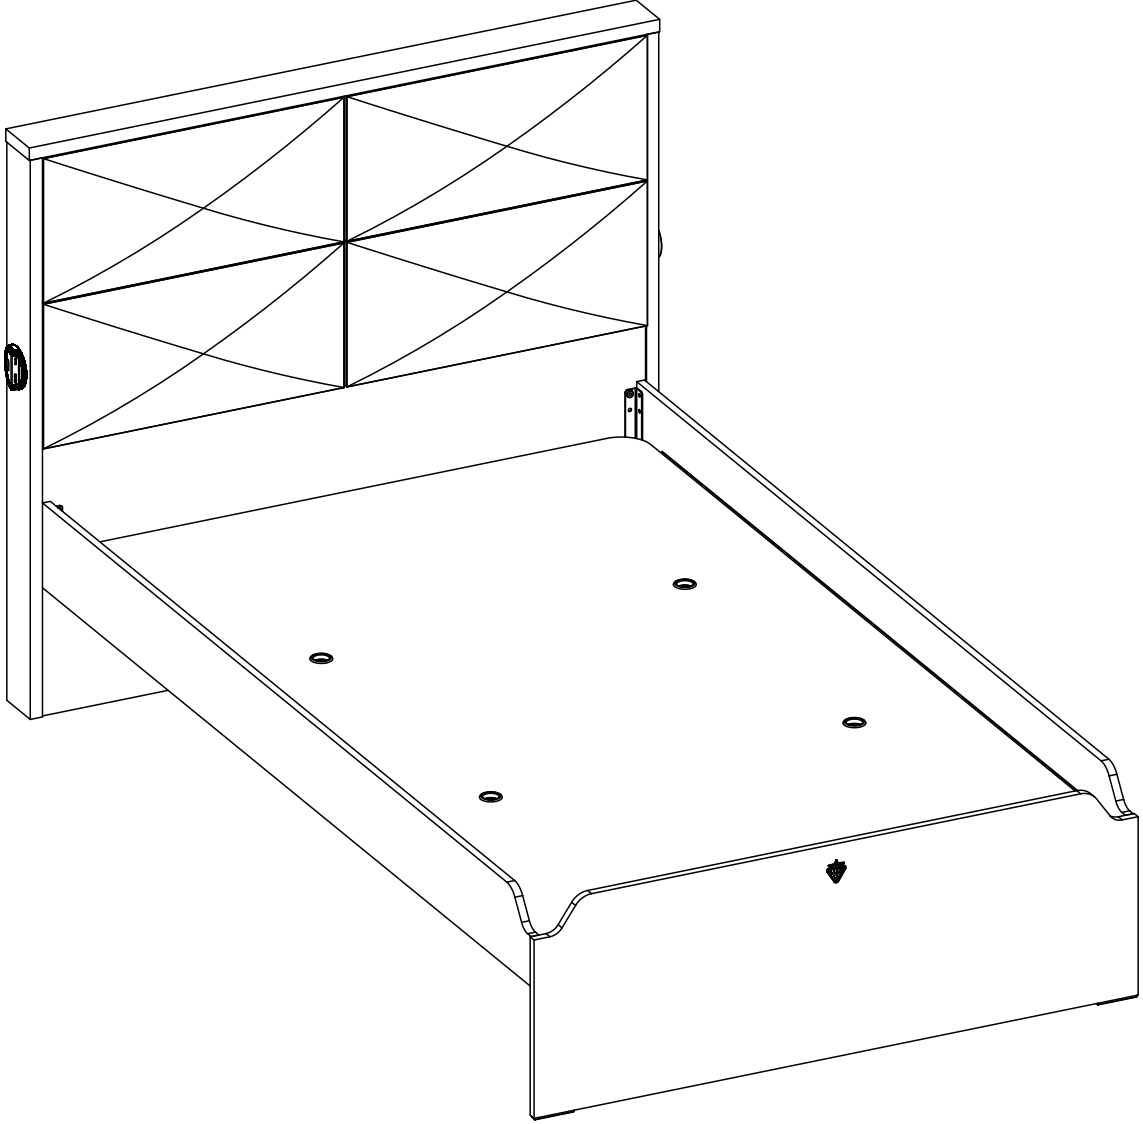




GARANTİ BELGESİ VE
KULLANMA KILAVUZU




WARRANTY CERTIFICATE
AND USER MANUAL

شهادة الضمان ودليل المستخدم



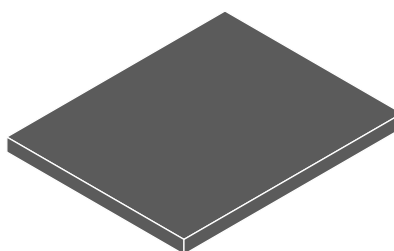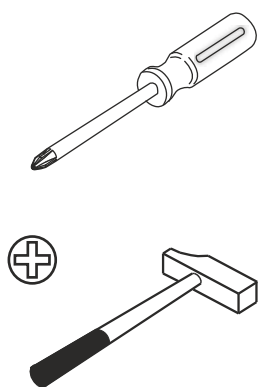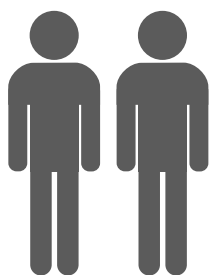

2/1

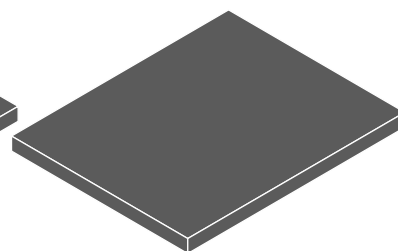

2/2




M6x13
13.03.01.021 x 24



13.02.01.017 x 30



M6x15
13.03.01.023 x 4

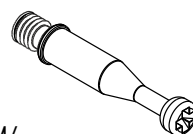


M6
13.07.01.108 x 14




16,5 mm
13.07.01.296 x 2



12,5 mm
13.07.01.110 x 12

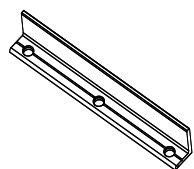


18.00.2000.208 x 2

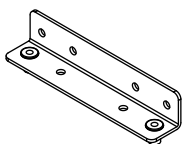


13.07.1314.203 x 2



13.07.01.016 x 1

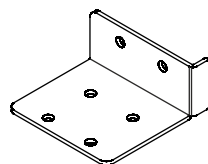


18.50.1315.204 x 1

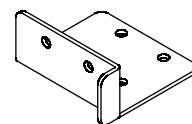


18.50.1315.205 x 1



13.01.01.045 x 10




13.01.01.111 x 4

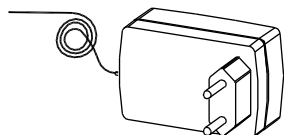

13.15.01.093 x 1




13.01.01.758 x 1

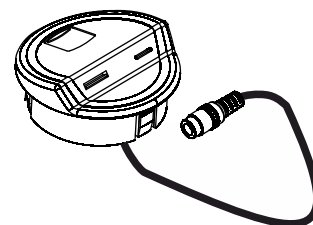


13.15.01.162 x 1


1/2

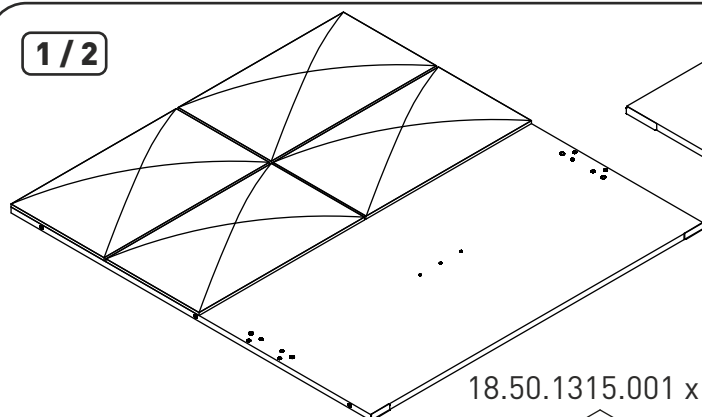


18.50.1315.001 x 1

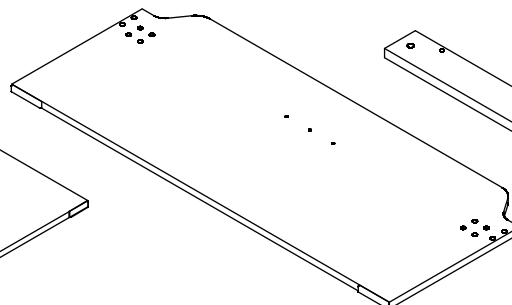


18.50.1315.004 x 1

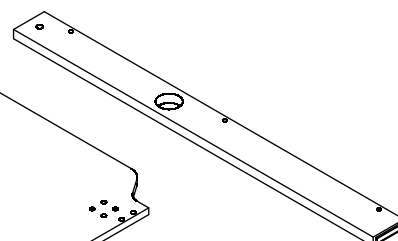

18.50.1315.006 x 1


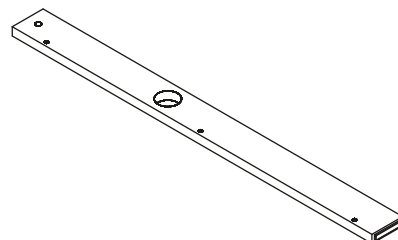


18.50.1315.007 x 1

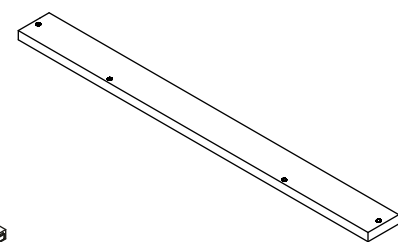


18.50.1315.008 x 1


2 / 2

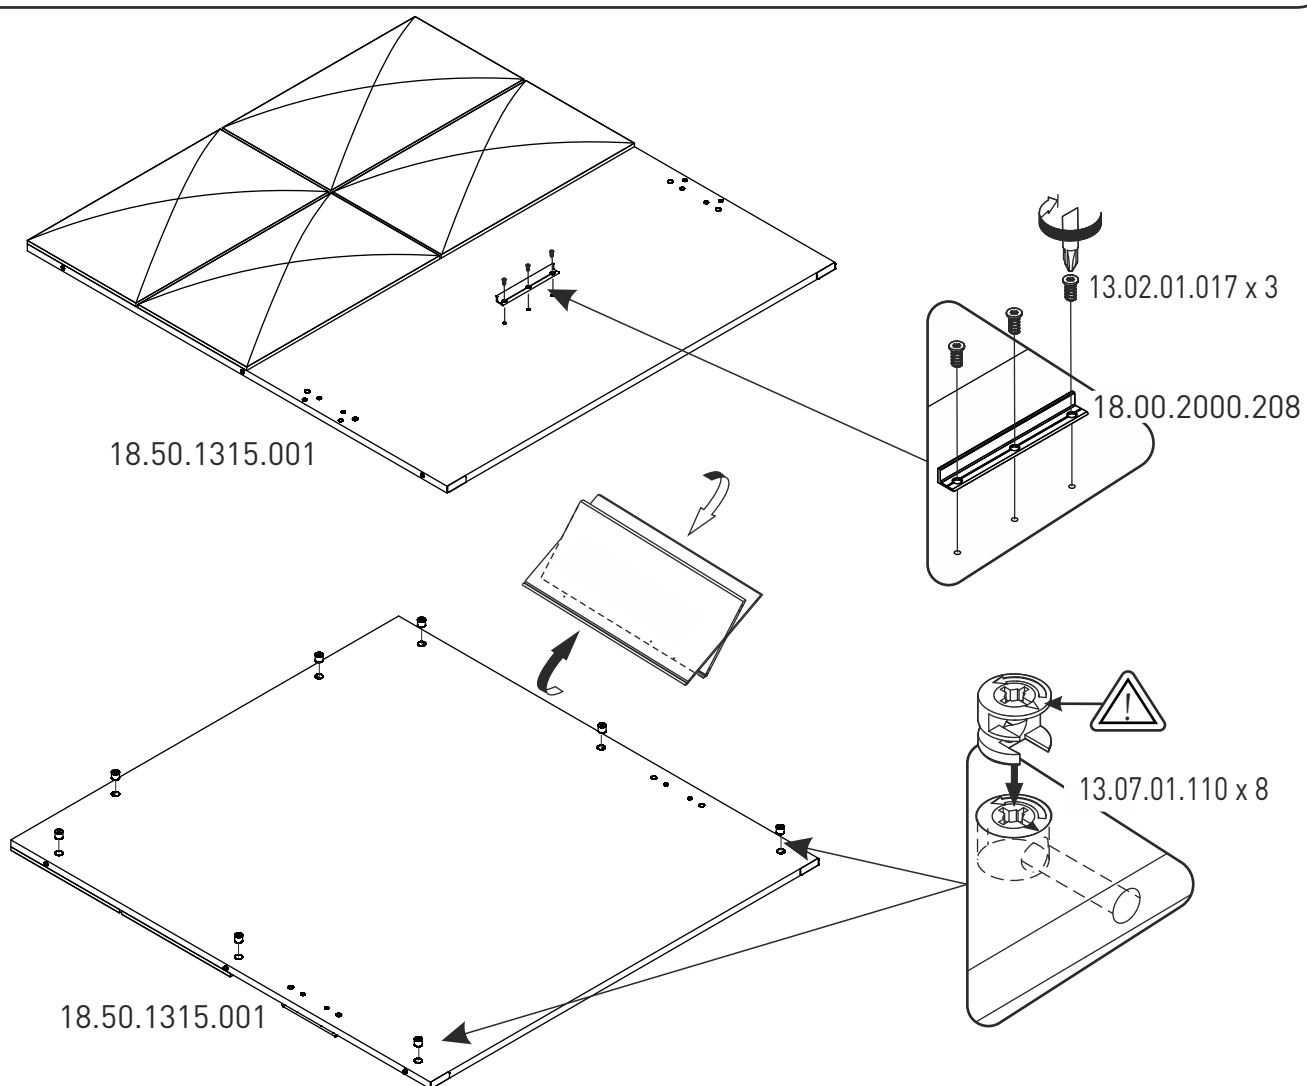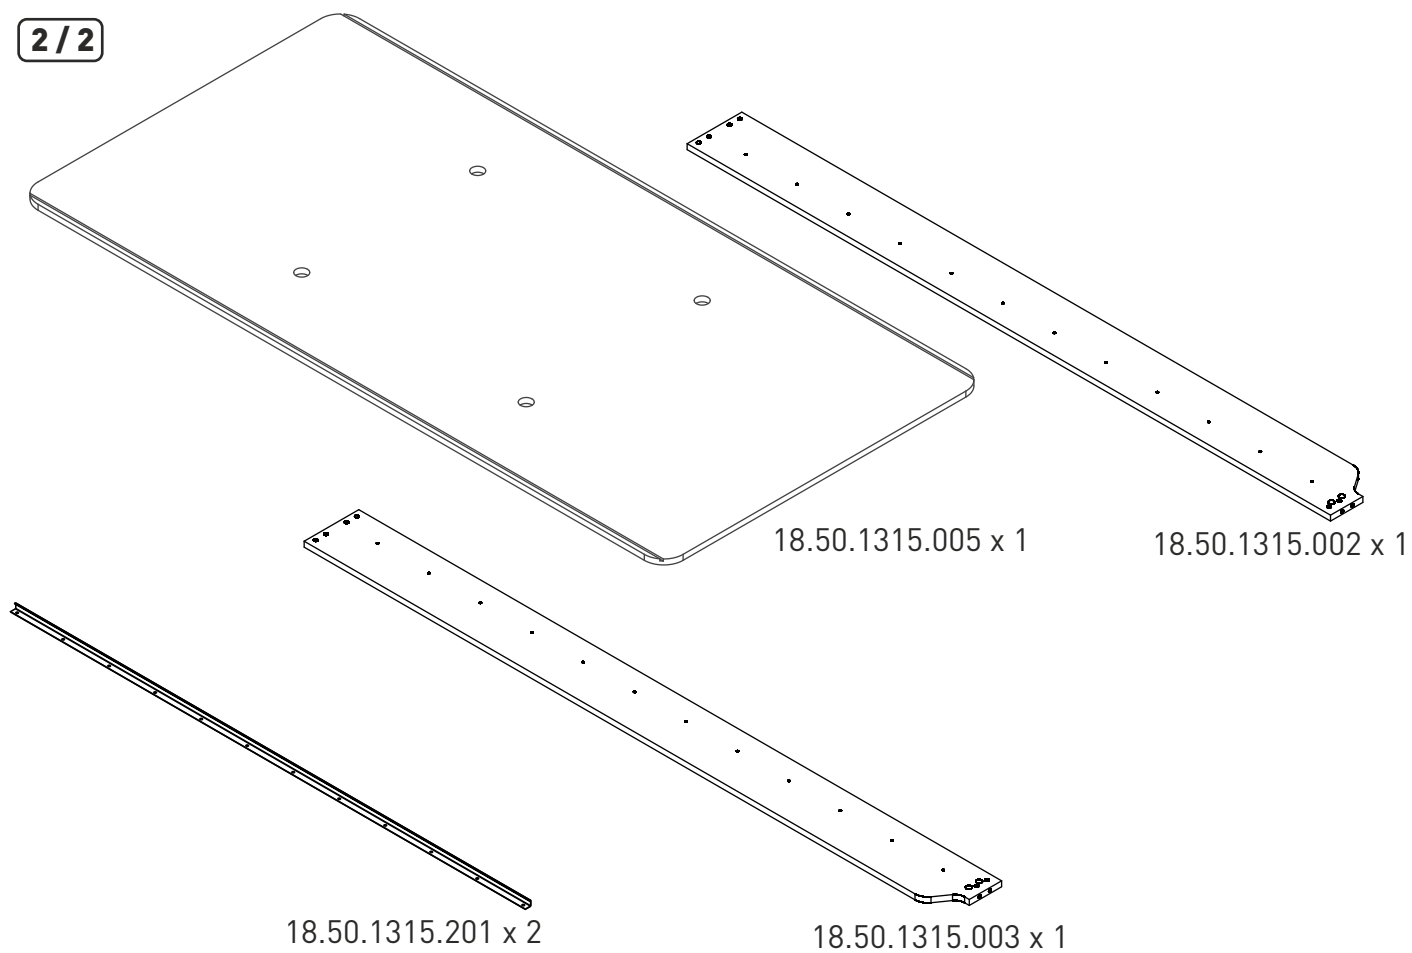


2

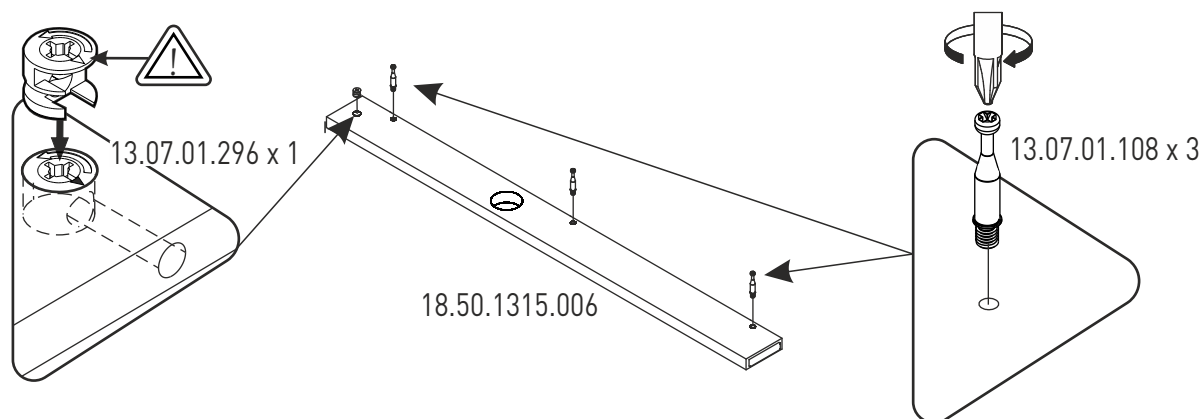


3



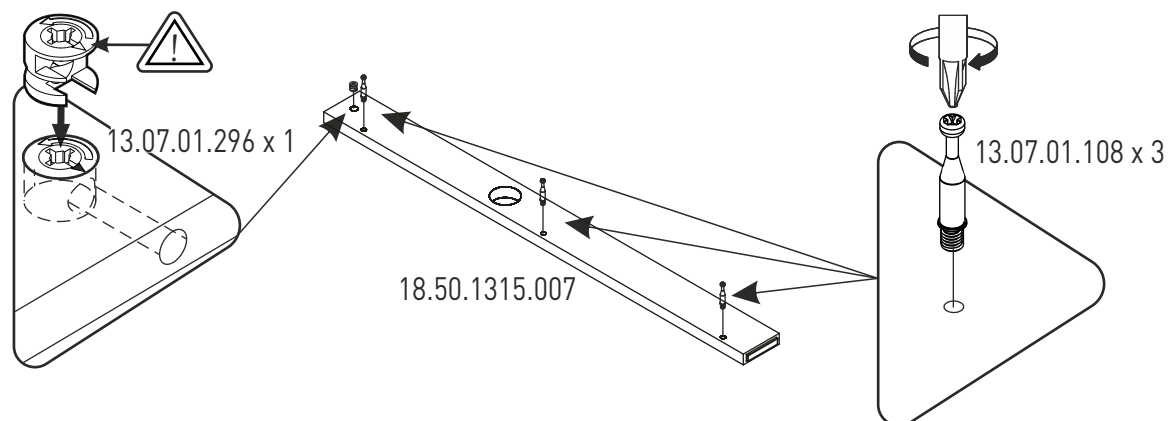


4

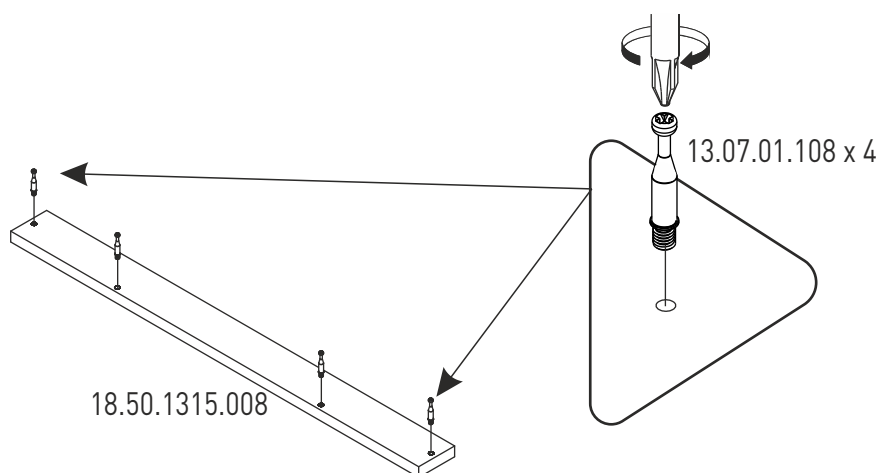

5

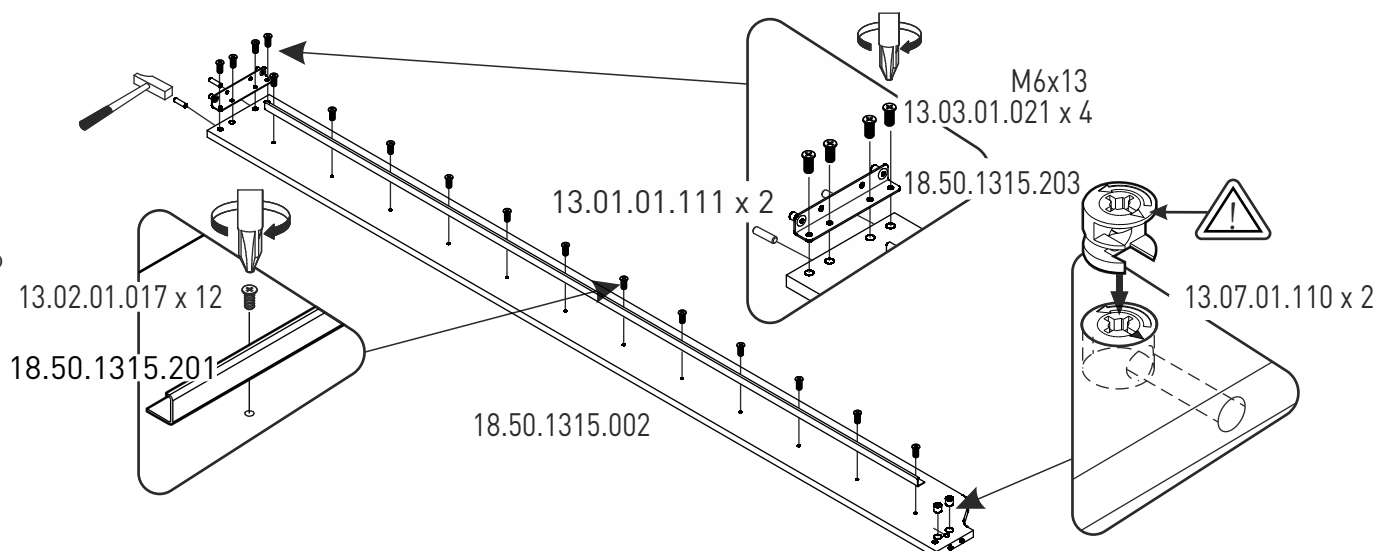

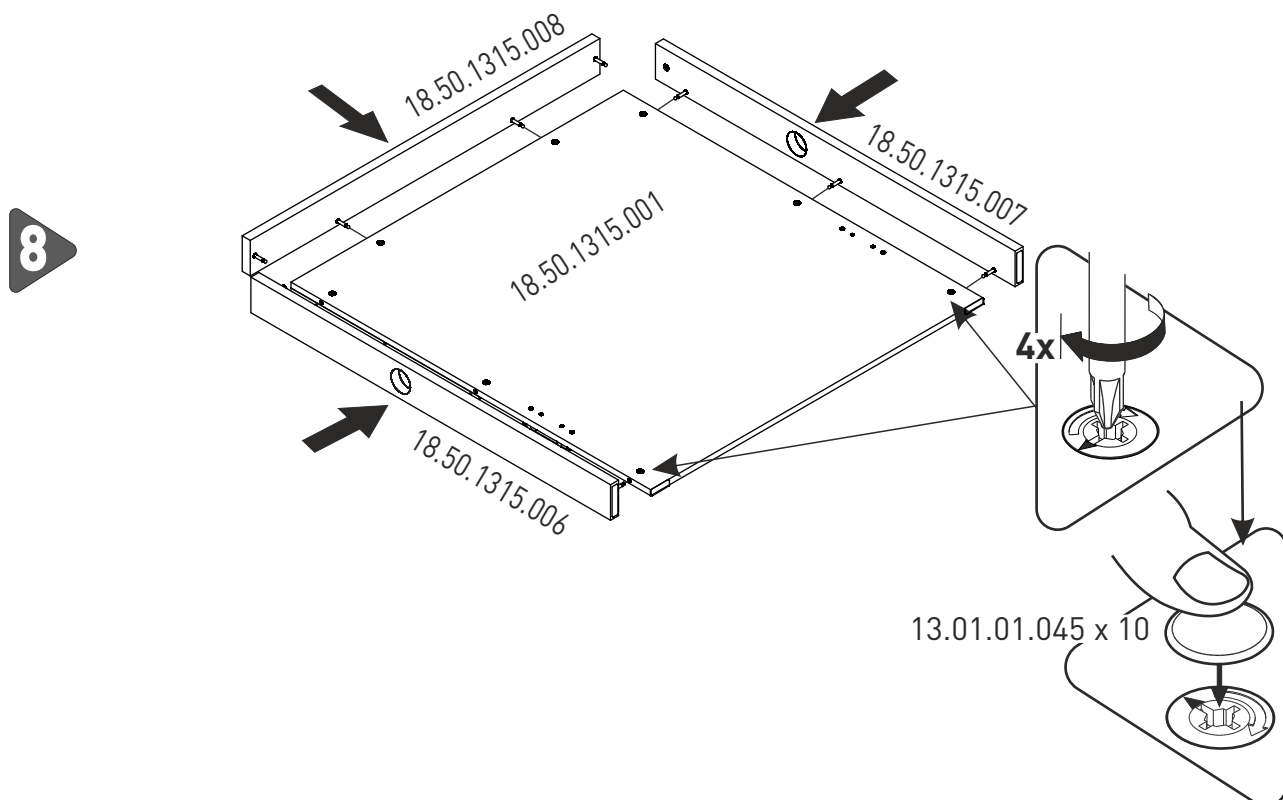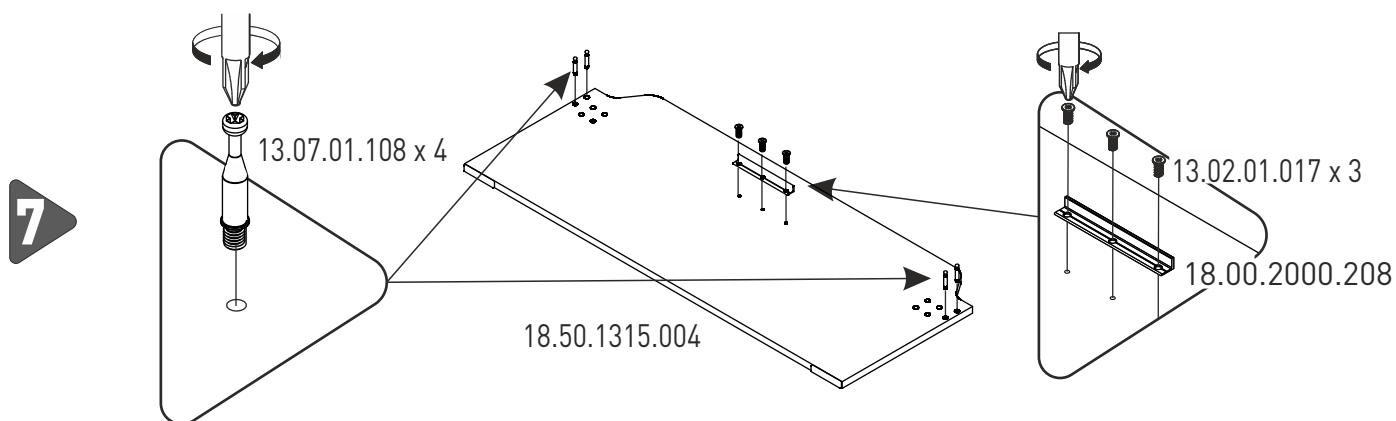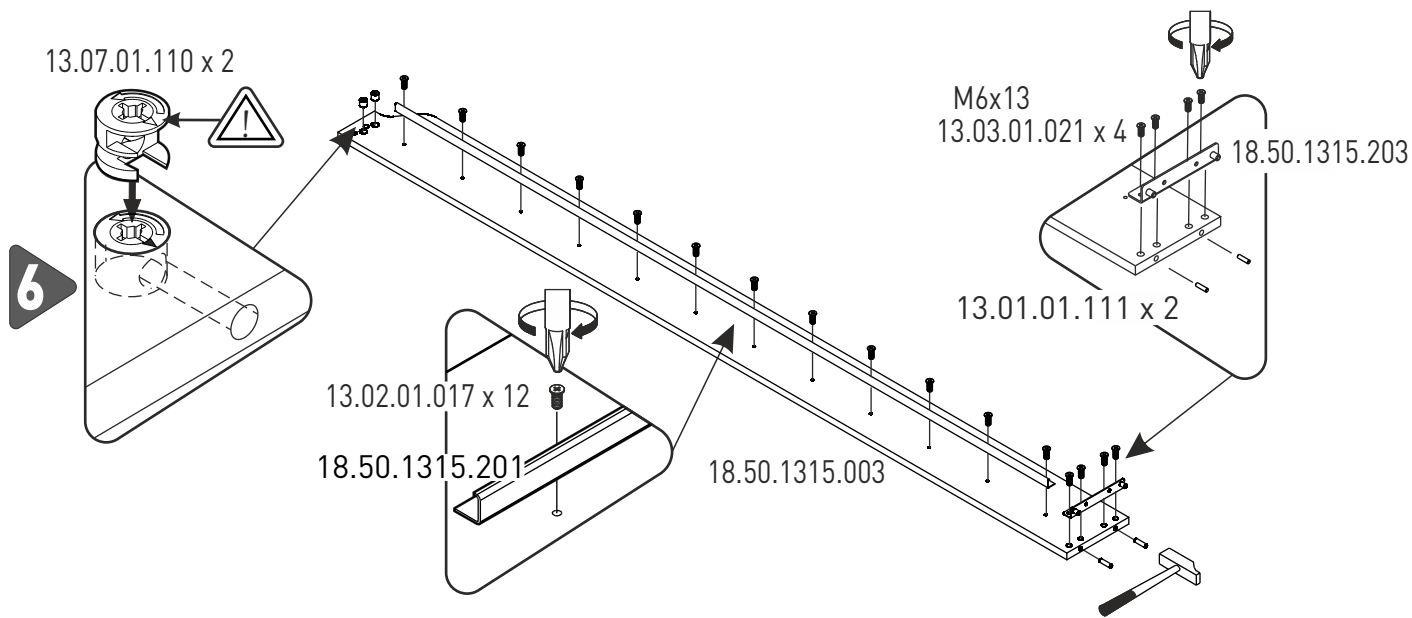

9

13.07.01.016

M6X15

13.03.01.023 x 4

18.50.1315.001

13.03.01.021 x 4

M6X13

4x

18.50.1315.002

18.50.1315.003

18.50.1315.004

10


This diagram illustrates the process of attaching the front panel to the side rail. The main components shown are:

- Side Rail:** Labeled with part number 18.50.1315.002.
- Front Panel:** Labeled with part number 18.50.1315.003.
- Top Bracket:** Labeled with part number 18.50.1315.204.
- Bottom Bracket:** Labeled with part number 18.50.1315.205.
- Screws:** Labeled with part number 13.03.01.021 x 6 M6x13.
- Knobs:** Labeled with part number 13.01.01.758.
- Locking Mechanism:** Labeled with part number 13.15.01.162 x 1.

The assembly steps are as follows:

- Attach the top bracket (18.50.1315.204) to the top of the side rail using screws (13.03.01.021 x 6 M6x13).
- Attach the bottom bracket (18.50.1315.205) to the bottom of the side rail using screws (13.03.01.021 x 6 M6x13).
- Align the front panel (18.50.1315.003) with the brackets and secure it with the screws.
- Insert the knobs (13.01.01.758) into the front panel.
- Install the locking mechanism (13.15.01.162 x 1) onto the front panel.

11

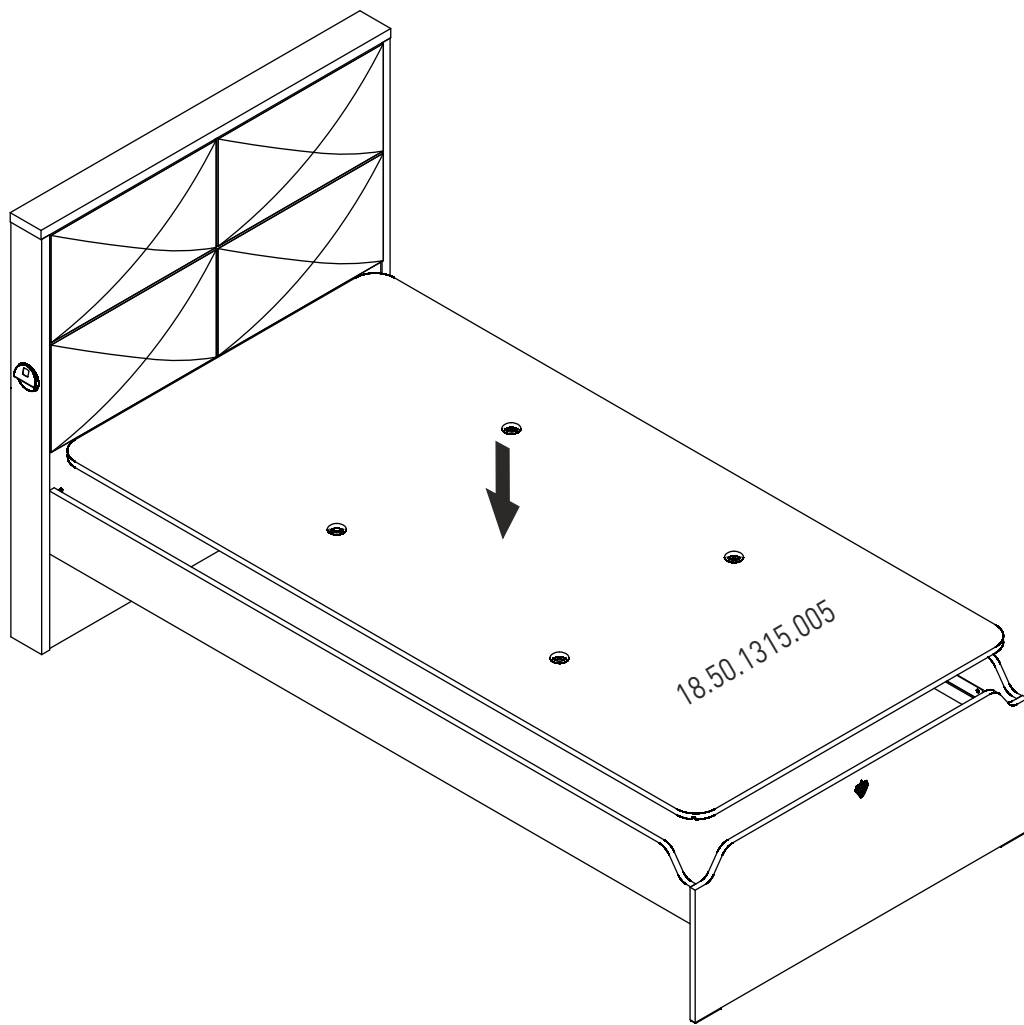

12

13.15.01.093

